


Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	PC		Media
	Comp / HDMI		Smart
	AV		AV
	DTV / TV		Shift + TV/R
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	Aspect		Format
	Source		Shift + AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	0		0
	Still		Pause
	Sleep		Sleep
	Menu		Menu
	Exit		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	TTX		Text
	Vol+		Vol +
	Vol-		Vol -
	i / Status		Info
	PR+		Ch +



