














 




 

 






 

























 














Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide / EPG / -/--
	Recall		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat

Originalfernbedienung Ersatzfernbedienung

	Blue		Blue / Prime Video / Random
	Source		AV / Input / RDS
	Vol+		Vol+
	Vol-		Vol-
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Audio		Audio / Lang I/II
	Aspect		Eject / Surround
	Display		Display / Media
	Tv/Radio		TV/Radio /
	Rec		Rec / Rec Mode
	Up		Up
	Left		Left
	OK/CH List		OK
	Right		Right
	Down		Down
	Menu		Menu / Home





Originalfernbedienung Ersatzfernbedienung

EXIT	Exit	CLEAR EXIT CANCEL	Exit / Cancel / Clear
EPG	EPG	GUIDE EPG	Guide / EPG / /--
P.MODE	P.Mode	FORMAT PICTURE	Picture / Format
S.MODE	S.Mode	TITLE SOUND	Sound / Title
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
TEXT	Text	GOTO TEXT	Text / Goto
HOLD PVR	PVR/Hold	OPT-TOOLS SETUP	Setup / OPT /
SIZE	Size	SIZE ZOOM	Zoom / Size
FAV	FAV	PC FAV MARKER	Fav / Marker / PC
TIMESHIFT	Play	SLOW	Play / Slow
TIMESHIFT	Pause/Timeshift	STEP-FREEZE II	Pause / Step / Freeze
AUTO	Stop/Auto	HOLD	Stop / Hold
REVEAL	Reveal	TOP MENU D.MENU	D.Menu / Top
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ
NICAM	<</Nicam	TUNE- TUNE-	<< / Tune-
FREEZE	>>/Freeze	TUNE+ TUNE+	>> / Tune+
INDEX	I<</Index	PRESET- PRESET-	I<< / Preset-

Originalfernbedienung Ersatzfernbedienung

SUBPAGE	>>I/Subpage	PRESET+ PRESET+	>>I / Preset+

