
 






 













 
 






**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Eject		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	DVD/DVB		Smart
	Tv/Radio		TV/R
	Digest		Format
	Angle/FAV		Pre Ch
	A-B/Return		Back

 
**Originalfernbedienung Ersatzfernbedienung**

	Title/PgUp		Ch +
	Prog/PgDn		Ch -
	Zoom/EPG		Guide
	SUB-T		Subt
	TTX		Text
	PBC/Menu		Menu
	Audio		Dual
	Display/Info		Info
	Exit		Exit
	Up/CH+		Up
	Down/CH-		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Goto/List		List





**Originalfernbedienung    Ersatzfernbedienung**

	Rec		Rec
	Stop		Stop
	Play		Play
	Pause		Pause
	<<		<<
	>>		>>
	l<<		l<<
	>>l		>>l
	Red/Slow		Red
	Green/Step		Green
	Yellow/Repeat		Yellow
	Blue/Direct		Blue
	Setup		Options
	USB		AV
	Mute		Mute
	Video		3D

**Originalfernbedienung    Ersatzfernbedienung**