


 



 
 


 

 

 



 



 

 













 














 


 

 

 

 



 


 

 



 

 




Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Source		AV
	Rec		Rec
	Play		Play
	Pause		Pause
	Stop		Stop
	Lang		Dual
	<<		<<
	>>		>>
	Text		Text
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv		TV/R
	Back		Shift + Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Menu		Menu
	Exit		Exit
	BACK		Back





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Q.Menu		D. Menu
	O		Options
	Music/Photo		Eject
	*/o		Subt
	*/Search		Sleep
	Tv List		List
	i		Info
	[≡]		Guide
	Size		Format
	Vol+		Vol +
	Vol-		Vol -
	PR+		Ch +
	PR-		Ch -
	Mute		Mute

