




 

 



 











 

 



 



 
 



**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Source		AV
	TV		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text
	Info		Info
	Menu		Menu
	Picture		Format



 


 


 
 

 





 
 

 

 
 

 
 
 


 





**Originalfernbedienung Ersatzfernbedienung**

	Sound		Dual
	PRG +		Ch +
	PRG -		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Vol +		Vol +
	Vol -		Vol -
	CTRL		Media
	Mute		Mute
	Exit		Exit
	Size / Audio		Shift + Dual
	Still / Subt		Subt
	PIP / REP		Options
	Focus / A-B		Eject
	Normal / Title		Ok





Originalfernbedienung Ersatzfernbedienung

	CVBS1	 + 	Shift + 1
	CVBS2	 + 	Shift + 2
	CVBS3	 + 	Shift + 3
	Y Pb Pr	 + 	Shift + 4
	YC1	 + 	Shift + 5
	YC2	 + 	Shift + 6
	PC		Pre Ch
	DVI / HDMI		Smart
	[≡?] / MTS		List
	[≡ ] / Sleep		Sleep
	[≡i] / Time		3D
	[≡ ] / PREPG		Guide
	Red / Delete		Red
	Green / Skip		Green
	Yellow / Insert		Yellow
	Blue / Replace		Blue

Originalfernbedienung Ersatzfernbedienung