












 





 

 









 

 

 

 

 





 

 

 










 
 

 



 




Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Source		AV
	Rec		Rec
	Play		Play
	Pause		Pause
	Stop		Stop
	Lang		Dual
	<<		<<
	>>		>>
	Text		Text
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv		TV/R
	Back		Shift + Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Menu		Menu
	Exit		Exit
	BACK		Back





Originalfernbedienung Ersatzfernbedienung

 Q.MENU	 D. Menu
 O	 Options
 Music/Photo	 Eject
 */o	 Subt
 */Search	 Sleep
 Tv List	 List
 i	 Info
 [≡]	 Guide
 Size	 Format
 Vol+	 Vol +
 Vol-	 Vol -
 PR+	 Ch +
 PR-	 Ch -
 Mute	 Mute

Originalfernbedienung Ersatzfernbedienung

