

 








 


 





 

 
 
 

 






 
 
 
 


 

















 

 
 
 

 






Originalfernbedienung Ersatzfernbedienung

 
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Sleep		Sleep
	Info		Info
	Zoom		Eject
	Menu		Menu
	Exit		Exit

Originalfernbedienung Ersatzfernbedienung

	Audio		Dual
	Tv/Radio		TV/R
	OK		Ok
	Up		Up
	CH+		Ch +
	CH-		Ch -
	Down		Down
	Right		Right
	Vol+		Vol +
	Left		Left
	Vol-		Vol -
	Red		Red
	Green		Green
	Subsubtitle		Subt
	Teletext		Text
	Yellow		Yellow
	Blue		Blue





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Replay		3D
	FAV		Pre Ch
	<<		<<
	Play		Play
	Pause		Pause
	>>		>>
	Digest		Options
	Guide		Guide
	Rec		Rec
	P▲		>>
	Stop		Stop
	P▼		I<<
	Return		Back

