 





 

 

 

 

 
 
 
























Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|-----------------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | Red |  | Red / Netflix / Search |
|  | Green |  | Green / APP / Repeat |
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Blue |  | Blue / Prime Video / Random |
|  | Zoom |  | Zoom / Size |
|  | SUB |  | Subtitle / EQ |
|  | Timeshift |  | Shift + Sleep / Timer |
|  | USB |  | Shift + 8 |
|  | TV/Radio |  | TV/Radio / |
|  | TXT |  | Text / Goto |
|  | PVRLIST |  | Smart / List |
|  | Sleep |  | Sleep / Timer |
|  | Play |  | Play / Slow |
|  | Pause |  | Pause / Step / Freeze |
|  | Stop |  | Stop / Hold |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|-----------------------|
|  | Rec |  | Rec / Rec Mode |
|  | Menu |  | Menu / Home |
|  | Up |  | Up |
|  | Exit |  | Exit / Cancel / Clear |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | EPG |  | Guide / EPG / -/- |
|  | Down |  | Down |
|  | Info |  | Info / Angle |
|  | I<< |  | I<< / Preset- |
|  | Audio |  | Audio / Lang I/II |
|  | << |  | << / Tune- |
|  | >>I |  | >>I / Preset+ |
|  | SAT |  | Shift + 0 |
|  | >> |  | >> / Tune+ |
|  | 1 |  | 1 |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--------|--|-------------------|
| | 2 | | 2 |
| | 3 | | 3 |
| | 4 | | 4 |
| | 5 | | 5 |
| | 6 | | 6 |
| | 7 | | 7 |
| | 8 | | 8 |
| | 9 | | 9 |
| | FAV | | Fav / Marker / PC |
| | 0 | | 0 |
| | Recall | | Back / Return |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

