

 




 






 






 
 




 

 



 




Originalfernbedienung Ersatzfernbedienung

 
 

 








 

 


	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Lang		Dual
	TXT		Text
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Source		AV

Originalfernbedienung Ersatzfernbedienung

	P+		Ch +
	P-		Ch -
	Guide		Guide
	Menu		Menu
	i		Info
	Back		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Netflix		Media
	F Play		TV/R
	You Tube		Smart
	Prime Video		Options
	Red		Red





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Green		Green
	Yellow		Yellow
	Blue		Blue
	<<		<<
	Pause		Pause
	>>		>>
	Rec		Rec
	Play		Play
	Stop		Stop

