



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|--------------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | V.Format |  | Shift + Picture / Format |
|  | Sleep |  | Sleep / Timer |
|  | Text |  | Text / Goto |
|  | TV / Radio |  | TV/Radio / |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | [[≡]] |  | Smart / List |
|  | 0 |  | 0 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|-----------------------|
|  | Recall |  | Back / Return |
|  | Vol - |  | Vol- |
|  | Vol + |  | Vol+ |
|  | CH - |  | CH- / Page- |
|  | CH + |  | CH+ / Page+ |
|  | Menu |  | Menu / Home |
|  | Up |  | Up |
|  | Exit |  | Exit / Cancel / Clear |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Page Down |  | Shift + CH- / |
|  | Down |  | Down |
|  | Page Up |  | Shift + CH+ / |
|  | FAV |  | Fav / Marker / PC |
|  | Guide |  | Guide / EPG / -/- |
|  | Info |  | Info / Angle |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|-----------------|--|-----------------------------|
| | ✓ | | Display / Media |
| | Red | | Red / Netflix / Search |
| | Green | | Green / APP / Repeat |
| | Yellow / Audio | | Yellow / YouTube / Repeat |
| | Yellow / Audio | | Audio / Lang I/II |
| | Blue / Subtitle | | Blue / Prime Video / Random |
| | Blue / Subtitle | | Subtitle / EQ |
| | Play | | Play / Slow |
| | Stop | | Stop / Hold |
| | Pause | | Pause / Step / Freeze |
| | Rec | | Rec / Rec Mode |
| | >[≡] | | Shift + Text / |
| | I> | | Shift + Pause / Step / |
| | << | | << / Tune- |
| | >> | | >> / Tune+ |
| | Zoom | | Zoom / Size |
| | > < | | Shift + Stop / |

Hold

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|---------|--|-----------------------------|
| | I<< | | I<< / Preset- |
| | >> | | >> / Preset+ |
| | SAT | | Shift + 0 |
| | Picture | | Picture / Format |
| | Book | | Setup / OPT / |
| | Book 2 | | Shift + Setup / OPT / Tools |

