



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	FAV		Fav / Marker / PC
	0		0
	TXT		Text / Goto
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

 

 

 





 



 

 

 

 

 


Originalfernbedienung Ersatzfernbedienung

	CEC		Smart / List
	?		D.Menu / Top
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	Up		Up
	Back		Back / Return
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Guide		Guide / EPG / -/-
	Tools		Setup / OPT /
	Vol+		Vol+
	Source		AV / Input / RDS
	PR+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer





**Originalfernbedienung**   **Ersatzfernbedienung**

	PR-		CH- / Page-
	I<		I<< / Preset-
	>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	[<>]		Picture / Format
	Dialog		Audio / Lang I/II
	[...]		Subtitle / EQ
	Tv/Radio		TV/Radio /
	My Media		Display / Media

**Originalfernbedienung**   **Ersatzfernbedienung**