



 













 



 


 
 











Originalfernbedienung Ersatzfernbedienung



|   |           |   |             |
|---|-----------|---|-------------|
|    | Power     |    | Power       |
|    | Up / P+   |    | Up          |
|    | Up / P+   |    | CH+ / Page+ |
|    | Menu      |    | Menu / Home |
|    | Left      |    | Left        |
|    | Right     |    | Right       |
|    | Down / P- |    | Down        |
|    | Down / P- |    | CH- / Page- |
|    | 1         |    | 1           |
|    | 2         |    | 2           |
|  | 3         |  | 3           |
|  | 4         |  | 4           |
|  | 5         |  | 5           |
|  | 6         |  | 6           |
|  | 7         |  | 7           |
|  | 8         |  | 8           |
|  | 9         |  | 9           |

Originalfernbedienung Ersatzfernbedienung

|   |        |   |                             |
|---|--------|---|-----------------------------|
|    | --     |    | Guide / EPG / -/-           |
|    | 0      |    | 0                           |
|    | P < P  |    | Fav / Marker / PC           |
|    | PP     |    | Back / Return               |
|    | Vol+   |    | Vol+                        |
|    | I-II   |    | Audio / Lang I/II           |
|    | Mute   |    | Mute / Dimmer               |
|    | Vol-   |    | Vol-                        |
|    | Info   |    | Info / Angle                |
|    | Red    |    | Red / Netflix / Search      |
|  | Green  |  | Green / APP / Repeat        |
|  | Yellow |  | Yellow / YouTube / Repeat   |
|  | Blue   |  | Blue / Prime Video / Random |
|  | [TV]   |  | Shift + 1                   |
|  | [TV]   |  | TV/Radio /                  |
|  | [AV]   |  | AV / Input / RDS            |
|  | [ ≡ ]  |  | Text / Goto                 |





| Originalfernbedienung  | Ersatzfernbedienung   | Originalfernbedienung | Ersatzfernbedienung |
|--|---|-----------------------|---------------------|
|  [≡☉]   |  Subtitle / EQ         |                       |                     |
|  [ /≡ ] |  Picture / Format      |                       |                     |
|  [≡X]   |  Exit / Cancel / Clear |                       |                     |
|  [≡↕]   |  Zoom / Size           |                       |                     |
|  [≡?] ] |  Display / Media       |                       |                     |
|  [≡i]   |  Smart / List          |                       |                     |
|  |   |                       |                     |
|  |   |                       |                     |
|  |   |                       |                     |
|  |   |                       |                     |
|  |   |                       |                     |
|  |   |                       |                     |
|  |   |                       |                     |
|  |   |                       |                     |
|  |   |                       |                     |
|  |   |                       |                     |
|  |   |                       |                     |
|  |   |                       |                     |
|  |   |                       |                     |
|  |   |                       |                     |
|  |   |                       |                     |
|  |   |                       |                     |
|  |   |                       |                     |
|  |   |                       |                     |







 

 

 


 
 

 












 


 





Originalfernbedienung Ersatzfernbedienung

|   |           |   |             |
|---|-----------|---|-------------|
|    | Power     |    | Power       |
|    | Up / P+   |    | Up          |
|    | Up / P+   |    | CH+ / Page+ |
|    | Menu      |    | Menu / Home |
|    | Left      |    | Left        |
|    | Select    |    | OK          |
|    | Right     |    | Right       |
|    | Down / P- |    | CH- / Page- |
|    | Down / P- |    | Down        |
|   | 1         |   | 1           |
|  | 2         |  | 2           |
|  | 3         |  | 3           |
|  | 4         |  | 4           |
|  | 5         |  | 5           |
|  | 6         |  | 6           |
|  | 7         |  | 7           |
|  | 8         |  | 8           |


 










Originalfernbedienung Ersatzfernbedienung

|   |          |   |                             |
|---|----------|---|-----------------------------|
|    | 9        |    | 9                           |
|    | +10      |    | Guide / EPG / -/-           |
|    | 0        |    | 0                           |
|    | Repeat   |    | Green / APP / Repeat        |
|    | Search   |    | Red / Netflix / Search      |
|    | A->B     |    | Yellow / YouTube / Repeat   |
|    | Display  |    | Display / Media             |
|    | Audio    |    | Audio / Lang I/II           |
|    | Subtitle |    | Subtitle / EQ               |
|   | Zoom     |   | Zoom / Size                 |
|  | Prog     |  | TV/Radio /                  |
|  | C        |  | Blue / Prime Video / Random |
|  | Angle    |  | Info / Angle                |
|  | Return   |  | Back / Return               |
|  | Time     |  | Sleep / Timer               |
|  | <<       |  | << / Tune-                  |
|  | >>       |  | >> / Tune+                  |





Originalfernbedienung    Ersatzfernbedienung

|   |   |   |                       |
|---|---|---|-----------------------|
|  |  |  | << / Preset-          |
|  |  |  | >>  / Preset+         |
|  |  |  | Play / Slow           |
|  |  |  | Pause / Step / Freeze |
|  |  |  | Stop / Hold           |
|  | Title   |  | Sound / Title         |
|  | Open / Close  |  | Eject / Surround      |
|   |   |   |                       |
|   |   |   |                       |
|   |   |   |                       |
|   |   |   |                       |
|   |   |   |                       |
|   |   |   |                       |
|   |   |   |                       |
|   |   |   |                       |
|   |   |   |                       |
|   |   |   |                       |
|   |   |   |                       |
|   |   |   |                       |
|   |   |   |                       |
|   |   |   |                       |
|   |   |   |                       |
|   |   |   |                       |


















Originalfernbedienung    Ersatzfernbedienung

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |






















**Originalfernbedienung Ersatzfernbedienung**

|             |   |                   |
|-------------|---|-------------------|
| On/Off      |    | Power             |
| Mute        |    | Mute / Dimmer     |
| Txt Stop    |    | Stop / Hold       |
| Tone+       |    | >> / Tune+        |
| Lang        |    | Sound / Title     |
| Menu audio  |    | Audio / Lang I/II |
| Subt.List   |    | Subtitle / EQ     |
| Txt Expand  |    | Zoom / Size       |
| Sleep Timer |    | Sleep / Timer     |
| Return TV   |   | TV/Radio /        |
| Menu video  |  | D.Menu / Top      |
| Text        |  | Text / Goto       |
| Menu        |  | Menu / Home       |
| Menu Up     |  | Up                |
| Info        |  | Info / Angle      |
| Menu Left   |  | Left              |
| OK Enter    |  | OK                |



**Originalfernbedienung Ersatzfernbedienung**

|            |   |                 |
|------------|---|-----------------|
| Menu Right |    | Right           |
| Menu Down  |    | Down            |
| Back       |    | Back / Return   |
| Volume+    |    | Vol+            |
| Chan.Up    |    | CH+ / Page+     |
| Volume-    |    | Vol-            |
| Display    |    | Display / Media |
| Chan.Down  |    | CH- / Page-     |
| 1          |    | 1               |
| 2          |   | 2               |
| 3          |  | 3               |
| 4          |  | 4               |
| 5          |  | 5               |
| 6          |  | 6               |
| 7          |  | 7               |
| 8          |  | 8               |
| 9          |  | 9               |





Originalfernbedienung Ersatzfernbedienung

|               |   |                             |
|---------------|---|-----------------------------|
| Guide -/-- 1. |    | Guide / EPG / -/--          |
| 0/10          |    | 0                           |
| 2.Fav P/C 2.  |    | Fav / Marker / PC           |
| Red           |    | Red / Netflix / Search      |
| Green         |    | Green / APP / Repeat        |
| Yellow        |    | Yellow / YouTube / Repeat   |
| Blue          |    | Blue / Prime Video / Random |
| Lang          |  +  | Shift + Audio / Lang I/II   |
|               |   |                             |
|               |   |                             |
|               |   |                             |
|               |   |                             |
|               |   |                             |
|               |   |                             |
|               |   |                             |
|               |   |                             |
|               |   |                             |
|               |   |                             |
|               |   |                             |
|               |   |                             |
|               |   |                             |

Originalfernbedienung Ersatzfernbedienung

|  |  |  |
|--|--|--|
|  |  |  |
|  |  |  |
|  |  |  |
|  |  |  |
|  |  |  |
|  |  |  |
|  |  |  |
|  |  |  |
|  |  |  |
|  |  |  |
|  |  |  |
|  |  |  |
|  |  |  |
|  |  |  |
|  |  |  |
|  |  |  |
|  |  |  |
|  |  |  |

