







 





 

 





 













 



 

 















 







 





Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Setup		Setup / OPT /
	Mute		Mute / Dimmer
	Tv/Sys		AV / Input / RDS
	Option		Shift + Setup / OPT / Tools
	Edit		Guide / EPG / -/-
	Info		Info / Angle
	Subtitle		Subtitle / EQ
	Audio		Audio / Lang / I/II
	Select		Smart / List
	Search		Red / Netflix / Search
	Copy		Blue / Prime Video / Random
	Zoom+		CH+ / Page+
	Zoom-		CH- / Page-
	♥/FAV		Fav / Marker / PC
	Play/Pause		Play / Slow
	Stop		Stop / Hold

Originalfernbedienung Ersatzfernbedienung

	Home		Menu / Home
	Up		Up
	Back		Back / Return
	Left		Left
	OK		OK
	Right		Right
	Vol+		Vol+
	Down		Down
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Vol-		Vol-
	1		1
	2		2
	3		3
	>>/FF		>> / Tune+
	4		4
	5		5





Originalfernbedienung Ersatzfernbedienung

6	6	TUNER 6	6
FR	<</FR	TUNE- <	<< / Tune-
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
A-B	A-B	YouTube REPEAT A-B	Yellow / YouTube / Repeat
MUSIC	Music	TITLE SOUND	Sound / Title
0	0	HDMI - BAT 0	0
REPEAT	Repeat	APP REPEAT	Green / APP / Repeat
SLOW	Slow	SHIFT + SLOW	Shift + Play /

Originalfernbedienung Ersatzfernbedienung