



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Red/Repeat		Red
	Green/Prog		Green
	Yellow/Slow		Yellow
	Blue/Angle		Blue
	Play		Play
	Pause		Pause
	Stop		Stop
	<<		<<
	>>		>>
	Goto/Fav		Pre Ch
	Eject		Eject
	I<<		I<<
	>>I		>>I
	Setup		Options
	Vcr		Format

Originalfernbedienung Ersatzfernbedienung

	TV/Radio		TV/R
	Recall		Back
	Menu		Menu
	Text		Text
	Exit		Exit
	Guide		Guide
	Source		AV
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Ok/Ch List		Ok
	Vol+		Vol +
	Vol-		Vol -
	Info		Info
	Zoom		Shift + Eject
	Ch+		Ch +





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
CH -	Ch -		
1	1		
2	2		
3	3		
4	4		
5	5		
6	6		
7	7		
8	8		
9	9		
0	0		
AUDIO	Audio		
SUBTITLE	Subtitle		

Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung

