



Originalfernbedienung	Ersatzfernbedienung
	Power
	Goto
	Source
	Mute
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	10+
	Shift + Pause / Step /
	Subtitle / EQ

Originalfernbedienung	Ersatzfernbedienung
	Info / Angle
	Audio / Lang I/II
	Fav / Marker / PC
	Sound / Title
	Up
	Stop / Hold
	Play / Slow
	Pause / Step / Freeze
	Left
	OK
	Right
	Shift + Play /
	Setup / OPT /
	Down
	Zoom / Size
	Menu / Home
	Green / APP / Repeat



