




 



 


 
 




 
 












 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Internet		Smart
	Tv/Radio		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	i		Info
	EPG		Guide
	Vol+		Vol +
	Vol-		Vol -

Originalfernbedienung Ersatzfernbedienung

	Mute		Mute
	P+		Ch +
	P-		Ch -
	Recall		Pre Ch
	Menu		Menu
	Music/Video/Photo		Media
	Back		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	FAV		Shift + Pre Ch
	LIB		Format
	OPT		Options
	Text		Text





Originalfernbedienung Ersatzfernbedienung

	Subt.		Subt
	Audio		Dual
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	<<		<<
	Pause		Pause
	>>		>>
	Rec		Rec
	Play		Play
	Stop		Stop

Originalfernbedienung Ersatzfernbedienung