 

 
 


 
 
 
 
 
 

 






**Originalfernbedienung    Ersatzfernbedienung**

|   |           |   |       |
|---|-----------|---|-------|
|    | On        |    | Power |
|    | Standby   |    | Smart |
|    | Play      |    | Play  |
|    | >>        |    | >>    |
|    | <<        |    | <<    |
|    | Pause     |    | Pause |
|    | Stop      |    | Stop  |
|    | >>        |    | >>    |
|    | <<        |    | <<    |
|    | Mute      |    | Mute  |
|   | Vol+      |   | Vol + |
|  | Vol-      |  | Vol - |
|  | HDMI Link |  | Media |
|  | Link Menu |  | Info  |
|  | Menu      |  | Menu  |
|  | Esc       |  | Exit  |
|  | Default   |  | Back  |

**Originalfernbedienung    Ersatzfernbedienung**

|   |            |   |                |
|---|------------|---|----------------|
|    | OK         |    | Ok             |
|    | Up         |    | Up             |
|    | Down       |    | Down           |
|    | Right      |    | Right          |
|    | Left       |    | Left           |
|    | A/V Mute   |    | AV             |
|    | Aspect     |    | Format         |
|    | Pattern    |    | D. Menu        |
|    | Split      |    | Text           |
|    | RGBCMY     |    | Subt           |
|   | Auto Iris  |   | Dual           |
|  | 2D/3D      |  | TV/R           |
|  | Color Mode |  | Shift + Format |
|  | Memory     |  | Red            |
|  | USB        |  | 1              |
|  | HDMI1      |  | 2              |
|  | HDMI2      |  | 3              |



