



Originalfernbedienung   Ersatzfernbedienung

	On		Power
	D/Scart		Source
	Off		Shift + Power
	Memory		Mode
	Color Mode		Auto
	Menu		Menu
	Aspect		Eco / Aspect
	ESC		Shift + Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Select		Enter
	HDMI		Vol + / Page +
	PC		Vol - / Page -
	Component		Comp / Video
	Color Temp		Freeze / Timer

Originalfernbedienung   Ersatzfernbedienung

	S-Video		Volt / Focus
	Blank		Blank / Mute
	Video		Shift + Comp / Video
	Contrast		- / Stop
	Gamma		+ / Play
	S.Tone		Help / Info
	Pattern		3D / Invert

