

 

 

 

 

 

 


 
 

 

 
 
 
 
 
 
 
 
 

 



 
 


Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Search		Source
	Computer		Comp / Video
	S-Video		Eco / Aspect
	Video		Volt / Focus
	USB Display		Shift + Source
	HDMI		Shift + Up
	Slideshow		3D / Invert
	A/V Mute		Blank / Mute
	Freeze		Freeze / Timer
	Auto		Auto
	Aspect		Mode
	Color Mode		Shift + Mode
	1		Shift + + / Play
	2		Shift + Volt / Focus
	3		Shift + - / Stop
	4		Shift + Help / Info





 


 

Info

Originalfernbedienung Ersatzfernbedienung

	5		Shift + Eco / Aspect
	6		Shift + 3D / Invert
	7		Shift + Blank / Mute
	8		Shift + Auto
	9		Shift + Freeze / Timer
	0		Shift + Comp / Video
	?/Help		Help / Info
	Page Down		Shift + Vol - / Page -
	Page Up		Shift + Vol + / Page +
	E-Zoom-		- / Stop
	E-Zoom+		+ / Play
	Vol-		Vol - / Page -
	Vol+		Vol + / Page +
	Menu		Menu
	Esc		Shift + Power
	Up		Up
	Down		Down





Originalfernbedienung	Ersatzfernbedienung
 Right	 Right
 Left	 Left
 Enter	 Enter
	 +  Shift + Right
	 +  Shift + Left

Originalfernbedienung	Ersatzfernbedienung

