

 







 







 
 


 



**Originalfernbedienung Ersatzfernbedienung**

	On		Power
	Standby		Shift + Power
	Search		Red / Netflix / Search
	Computer		Shift + Fav / Marker / PC
	BNC		Shift + 8
	DisplayPort		Shift + Guide / EPG / -/-
	Video		Shift + 4
	S-Video		Shift + 5
	HDMI		Shift + 0
	LAN		Shift + 6
	HDBaseT		Shift + 7
	SDI		Shift + 9
	Auto		Smart / List
	Aspect		Picture / Format
	Color Mode		Setup / OPT /
	Test Pattern		Text / Goto
	Freeze		Pause / Step / Freeze

**Originalfernbedienung Ersatzfernbedienung**

	AV Mute		Mute / Dimmer
	Menu		Menu / Home
	Esc		Exit / Cancel / Clear
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Split		Info / Angle
	Default		Back / Return
	Page Up		CH+ / Page+
	Vol+		Vol+
	E-Zoom+		>>I / Preset+
	Page Down		CH- / Page-
	Vol-		Vol-
	E-Zoom-		I<< / Preset-
	User 1		Shift + 1



