





Originalfernbedienung Ersatzfernbedienung

	On		Power
	Standby		Shift + Power
	Home		Shift + Menu /
	Blank		Display / Media
	HDMI 1		1
	HDMI 2		2
	P-in-P/Swap		3
	PC		Fav / Marker / PC
	LAN		5
	Wireless HD		6
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	I<<		I<< / Preset-
	Pause		Pause / Step / Freeze
	>>I		>>I / Preset+
	Link Menu		D.Menu / Top

Originalfernbedienung Ersatzfernbedienung

	Stop		Stop / Hold
	Mute		Mute / Dimmer
	HDMI Link		Smart / List
	Volume-		Vol-
	Volume+		Vol+
	Lens		TV/Radio /
	Color Mode		Setup / OPT /
	Image Enh		Sleep / Timer
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Default		Back / Return
	Down		Down
	Esc		Exit / Cancel / Clear
	Menu		Menu / Home
	Memory		Red / Netflix / Search



