 






Originalfernbedienung Ersatzfernbedienung

	On		Power
	Standby		Shift + Power
	Search		Red / Netflix / Search
	HDMI		0
	HDBaseT		Display / Media
	DVI-D		Blue / Prime Video / Random
	Computer		Fav / Marker / PC
	BNC		Green / APP / Repeat
	LAN		D.Menu / Top
	SDI		AV / Input / RDS
	Auto		Guide / EPG / -/--
	Aspect		Shift + Picture / Format
	Color Mode		Picture / Format
	Test Pattern		Text / Goto
	Freeze		Pause / Step / Freeze
	Split		Back / Return
	Lens Shift		Subtitle / EQ

Originalfernbedienung Ersatzfernbedienung

	Zoom		Zoom / Size
	Focus		Setup / OPT /
	Menu		Menu / Home
	Esc/Mouse		Exit / Cancel / Clear
	Up		Up
	Left		Left
	Enter/Mouse		OK
	Right		Right
	Down		Down
	A/V Mute		Mute / Dimmer
	Default		Audio / Lang I/II
	Page Up		CH+ / Page+
	Volume+		Vol+
	E-Zoom+		>>I / Preset+
	Page Down		CH- / Page-
	Volume-		Vol-
	E-Zoom-		I<< / Preset-



