



 

























 

 





Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	i / EPG		Guide / EPG / -/--
	i / EPG		Info / Angle
	0		0
	List		Smart / List
	Up / CH+		CH+ / Page+
	Up / CH+		Up

Originalfernbedienung Ersatzfernbedienung

	Left / Vol-		Left
	Left / Vol-		Vol-
	OK		OK
	Right / Vol+		Vol+
	Right / Vol+		Right
	Down / CH-		Down
	Down / CH-		CH- / Page-
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	Rec		Rec / Rec Mode
	Swap		Back / Return
	Red / <<		Red / Netflix / Search
	Red / <<		<< / Tune-
	Green / Play		Play / Slow
	Green / Play		Green / APP / Repeat
	Blue / >> / Text		>> / Tune+
	Blue / >> / Text		Blue / Prime Video / Random





Originalfernbedienung **Ersatzfernbedienung**

	Blue / >> / Text		Text / Goto	
	Radio		+	Shift + 6
	Radio		+	Shift + TV/Radio / Program
	Yellow / Pause		Pause / Step / Freeze	
	Yellow / Pause		Yellow / YouTube / Repeat	
	Stop		Stop / Hold	
	TV		+	Shift + 1
	TV		TV/Radio /	
	F1		Sound / Title	
	F2		Audio / Lang I/II	

Originalfernbedienung **Ersatzfernbedienung**

