







 
 
 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------------|--|--------------|
|  | Power STB |  | Power |
|  | Red / Audio |  | Dual |
|  | Mute |  | Mute |
|  | TV / Rad |  | TV/R |
|  | OPT. |  | Options |
|  | EPG |  | Guide |
|  | Red / Audio |  | Red |
|  | Green / Stereo |  | Green |
|  | Yellow / Text |  | Yellow |
|  | Yellow / Text |  | Text |
|  | Blue / Subtitle |  | Blue |
|  | Blue / Subtitle |  | Subt |
|  | Menu |  | Menu |
|  | Exit |  | Exit |
|  | Page+ |  | Shift + Ch + |
|  | Page- |  | Shift + Ch - |
|  | Up |  | Up |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|-------|
|  | Left |  | Left |
|  | OK |  | Ok |
|  | Right |  | Right |
|  | Down |  | Down |
|  | CH+ |  | Ch + |
|  | CH- |  | Ch - |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Info |  | Info |
|  | PVR |  | Smart |
|  | Recall |  | Back |
|  | Play |  | Play |
|  | >> |  | >> |
|  | Stop |  | Stop |
|  | Rec |  | Rec |
|  | Pause |  | Pause |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|---------------|--|--------|
| | USB | | Media |
| | Bookmark | | List |
| | Use Bookmarks | | Sleep |
| | 1 | | 1 |
| | 2 | | 2 |
| | 3 | | 3 |
| | 4 | | 4 |
| | 5 | | 5 |
| | 6 | | 6 |
| | 7 | | 7 |
| | 8 | | 8 |
| | 9 | | 9 |
| | 0 | | 0 |
| | FAV | | Pre Ch |
| | V/F | | Format |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

