

 
 
 
 
 

 
 
 


 

 

 

 

 
 

 
 

 
 

 
 
 
 
 

 

 
 

 










 
 

 


 
 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Setup		Options
	Disk		D. Menu
	HDMI/AV		AV
	Mute		Mute
	Edit		Media
	Copy		Guide
	DIR		Pre Ch
	Movie		Red
	Music		Green
	Photo		Yellow
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6

Originalfernbedienung Ersatzfernbedienung

	7		7
	8		8
	9		9
	0		0
	Vol+		Vol +
	Vol-		Vol -
	Enter		Ok
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Repeat		Text
	Pause		Pause
	Play		Play
	Stop		Stop
	<<		<<
	>>		>>





Originalfernbedienung Ersatzfernbedienung

	I<</Pg Up		I<<
	>>/Pg Dn		>>I
	Audio		Dual
	Exit		Exit
	SUB-T		Subt
	PSM		List
	Info		Info
	DVD		TV/R
	S.Show		3D
	Home/HDME		Smart
	Step		Format

Originalfernbedienung Ersatzfernbedienung

