




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Goto		Text / Goto
	Info		Info / Angle
	Slow		Shift + Play /
	Zoom		Zoom / Size
	Repeat		Shift + Green / APP / Repeat

Originalfernbedienung Ersatzfernbedienung

	A - B		Yellow / YouTube / Repeat
	<<		<< / Tune-
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	>>		>> / Tune+
	I<<		I<< / Preset-
	Stop		Stop / Hold
	>>I		>>I / Preset+
	Menu		Menu / Home
	Vol -		Vol-
	Vol +		Vol+
	Exit		Exit / Cancel / Clear
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Option	 + 	Shift + Setup / OPT / Tools
	Setup		Setup / OPT /
	TV SYS		D.Menu / Top
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	16:9 / 4:3		Picture / Format
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Open / Close		Eject / Surround

