
 
 
 










 

 









 



 

 
 
 





Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Sub-T		Subtitle / EQ
	TTX		Text / Goto
	Mute		Mute / Dimmer
	EPG		Guide / EPG / -/--
	GOTO		Shift + Text /
	Page +		CH+ / Page+
	Audio		Audio / Lang I/II
	Repeat		Shift + 0
	Page -		CH- / Page-
	Menu		Menu / Home
	Up / CH +		Up
	Up / CH +		Shift + Up
	Exit		Exit / Cancel / Clear
	Left / Vol -		Shift + Left
	Left / Vol -		Left
	OK		OK

Originalfernbedienung Ersatzfernbedienung

	Right / Vol +		Shift + Right
	Right / Vol +		Right
	FAV		Fav / Marker / PC
	Down / CH -		Shift + Down
	Down / CH -		Down
	TV / Radio		TV/Radio /
	1		1
	2		2
	3		3
	Recall		Back / Return
	4		4
	5		5
	6		6
	Info		Info / Angle
	7		7
	8		8
	9		9





Originalfernbedienung Ersatzfernbedienung

	0		0
	<< Rev		<< / Tune-
	>> Fwd		>> / Tune+
	I<< Prev		I<< / Preset-
	>>I Next		>>I / Preset+
	Play		Play / Slow
	Pause / Timeshift		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	Red / PVR		Red / Netflix / Search
	Green / V-Format	+	Shift + Green / APP / REPEAT
	Green / V-Format		Green / APP / Repeat
	Yellow / Aspect	+	Shift + Yellow / YouTube / REPEAT A-B
	Yellow / Aspect		Yellow / YouTube / Repeat
	Blue / Timer		Blue / Prime Video / Random
	Blue / Timer	+	Shift + Blue / Prime

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	SUB-T		Subtitle / EQ
	TTX		Text / Goto
	Mute		Mute / Dimmer
	EPG		Guide / EPG / -/--
	Goto		Shift + Text /
	Page+		CH+ / Page+
	Lang		Audio / Lang I/II
	Repeat		Shift + Green / APP /
	Page-		CH- / Page-
	Menu		Menu / Home
	Up/CH+		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	Vol-		Vol-
	OK		OK
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	FAV		Fav / Marker / PC
	Down/CH-		Down
	Tv/Radio		TV/Radio /
	1		1
	2		2
	3		3
	Recall		Back / Return
	4		4
	5		5
	6		6
	Info		Info / Angle
	7		7
	8		8
	9		9
	0		0
	<<		<< / Tune-




Originalfernbedienung Ersatzfernbedienung

	>>		>> / Tune+
	<<		<< / Preset-
	>>		>> / Preset+
	Play		Play / Slow
	Pause/Timeshift		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	Red		Red / Netflix / Search
	PVR		Setup / OPT /
	Green		Green / APP / Repeat
	V-Format		Picture / Format
	Yellow		Yellow / YouTube / Repeat
	Aspect		AV / Input / RDS
	Blue		Blue / Prime Video / Random
	Timer		Sleep / Timer

Originalfernbedienung Ersatzfernbedienung

