




















 

 









 






 





 
 
 







**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Sleep		Sleep
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide
	Recall		Back
	Source		AV
	P.Std		Format
















**Originalfernbedienung Ersatzfernbedienung**

	S.Std		Dual
	Menu ATV		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol +		Vol +
	Vol -		Vol -
	Program +		Ch +
	Program -		Ch -
	Freeze / Eject		Eject
	Info / Display		Info
	Menu DVB		D. Menu
	I / II		Shift + Dual
	TTX / Play / Pause		Text
	TTX / Play / Pause		Play





**Originalfernbedienung    Ersatzfernbedienung**

	Exit / Stop		Stop
	Exit / Stop		Exit
	EPG / Title		Guide
	FAV		Pre Ch
	TV / R		TV/R
	Sub		Subt
	Aspect		3D
	Mix / A-B		Media
	Red		Red
	I<<		I<<
	Green		Green
	>>I		>>I
	Yellow		Yellow
	<<		<<
	Blue		Blue
	>>		>>

**Originalfernbedienung    Ersatzfernbedienung**