



 



 
 














**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	Display		Info
	P.Mode		Format
	Text		Text
	Red / PIP		Red
	Green / Sub Ch		Green

**Originalfernbedienung    Ersatzfernbedienung**

	Yellow / Swap		Yellow
	Blue / Main Ch		Blue
	Up		Up
	CH+		Ch +
	Down		Down
	CH-		Ch -
	Right		Right
	Vol+		Vol +
	Left		Left
	Vol-		Vol -
	Menu		Menu
	Menu		Ok
	S.Mode		Shift + Dual
	Mute		Mute
	Zoom / Sub		3D
	Still		Back
	O)/▼/Audio / Reveal		Dual





**Originalfernbedienung**    **Ersatzfernbedienung**

Index Video	Video / Index	TIMER AV	AV
Hold S/Video	S-Video / Hold	SEARCH TV/R	TV/R
Size PC	PC / Size	SETTINGS OPT	Options
Cancel YPbPr	YPbPr / Cancel	CLEAR EXIT	Exit
Mix DM	DM / Mix	AD SUBT	Subt
Time	Time	SHIFT + TIMER AV	Shift + AV

**Originalfernbedienung**    **Ersatzfernbedienung**