



































Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV/VCR		Smart / List
	0		0
	CM-Skip		Display / Media
	REC / ITR		Rec / Rec Mode
	Eject		Eject / Surround
	Play		Play / Slow
	<< REW		<< / Tune-


















Originalfernbedienung Ersatzfernbedienung

	<< REW		I<< / Preset-
	>> F FWD		>> / Tune+
	>> F FWD		>>I / Preset+
	Pause/Still		Pause / Step / Freeze
	Stop		Stop / Hold
	Left		Left
	Up		Up
	Right		Right
	Down		Down
	Clear		Exit / Cancel / Clear
	OK / CLK / CNT		OK
	i		Info / Angle
	LP		Text / Goto
	AV		AV / Input / RDS
	C.Lock		TV/Radio /












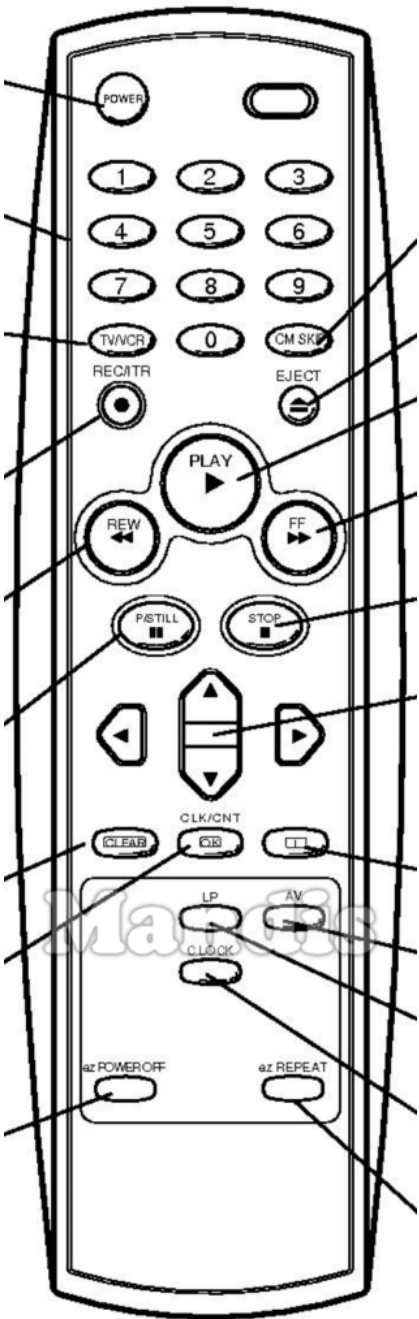 
Originalfernbedienung Ersatzfernbedienung

On/Off		Power
Audio Out		Mute / Dimmer
Play		Play / Slow
Pause		Pause / Step / Freeze
Stop		Stop / Hold
Record		Rec / Rec Mode
Rewind		<< / Tune-
F.Forward		>> / Tune+
Prev.		I<< / Preset-
Next		>>I / Preset+
F.Adv		Sound / Title
Audio		Audio / Lang I/II
Case Tape		Eject / Surround
Mon/TV		Picture / Format
Sp/Lp/Speed		Zoom / Size
Timer/Sleep		Sleep / Timer
Progr/C/CH		TV/Radio /

Originalfernbedienung Ersatzfernbedienung

Auto/Track		D.Menu / Top
T.Set/Clock		Setup / OPT /
Video/Go-To		Text / Goto
Input Source		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
Menu Left		Left
OK Enter		OK
Menu Right		Right
Exit		Exit / Cancel / Clear
Menu Down		Down
Slow/Dpss+		Vol+
VCR/TV		Smart / List
Tracking+		CH+ / Page+
Slow/Dpss-		Vol-
Display		Display / Media
Tracking-		CH- / Page-



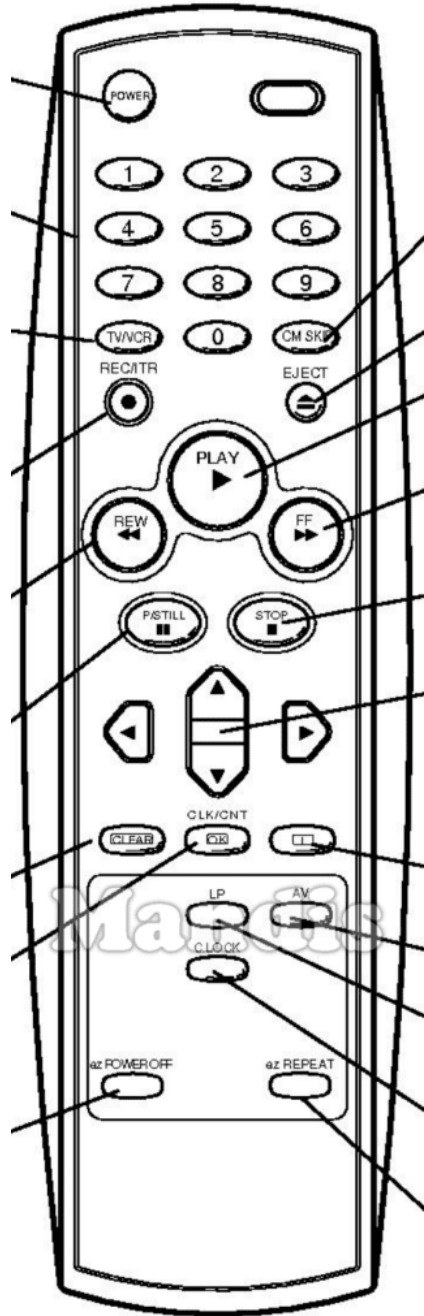


Originalfernbedienung Ersatzfernbedienung


















1	TV 1	1
2	DVD 2	2
3	CD - STB 3	3
4	VIDEO 4	4
5	TAPE 5	5
6	TUNER 6	6
7	AUX - HDD 7	7
8	USB 8	8
9	BLUETOOTH 9	9
-/--	GUIDE EPG 9	Guide / EPG / -/--
0	HDMI - BAT 0	0
Ch.Memo	PC FAV MARKER 0	Fav / Marker / PC
Repeat	APP REPEAT 0	Green / APP / Repeat
Slow Down	SHIFT + SLOW	Shift + Play /
Clear 00:00	SHIFT + CLEAR EXIT CANCEL	Shift + Exit / Cancel / Clear
Index Pict+	SHIFT + CH PAGE	Shift + CH+ /
Index Pict-	SHIFT + CH PAGE	Shift + CH- /

Originalfernbedienung Ersatzfernbedienung






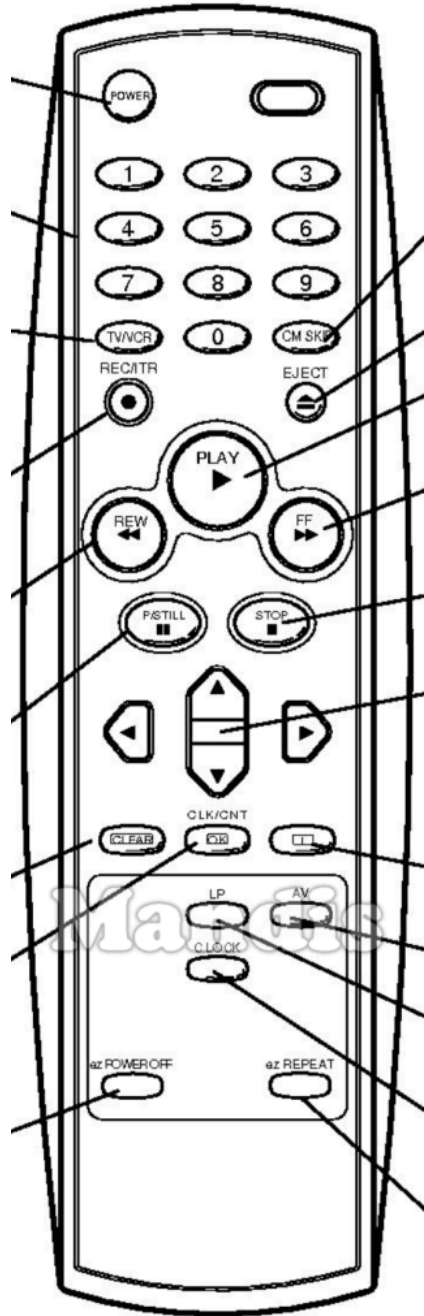
Originalfernbedienung Ersatzfernbedienung

On/Off		Power
Audio Out		Mute / Dimmer
Play		Play / Slow
Pause		Pause / Step / Freeze
Stop		Stop / Hold
Record		Rec / Rec Mode
Rewind		<< / Tune-
F.Forward		>> / Tune+
Prev.		I<< / Preset-
Next		>>I / Preset+
Audio Dub		Sound / Title
Audio		Audio / Lang I/II
Rec/Mode		Subtitle / EQ
Eject/Reverse		Eject / Surround
Mon/TV		Picture / Format
Sp/Lp/Speed		Zoom / Size
Timer/Record		Sleep / Timer


















Originalfernbedienung Ersatzfernbedienung

Progr/C/CH		TV/Radio /
Auto/Track		D.Menu / Top
T.Set/Clock		Setup / OPT /
Video/Go-To		Text / Goto
Input Source		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
Show View		Info / Angle
Menu Left		Left
OK Enter		OK
Menu Right		Right
Exit		Exit / Cancel / Clear
Menu Down		Down
F.Adv		Back / Return
Slow/Dpss+		Vol+
VCR/TV		Smart / List
Chan+		CH+ / Page+













 


 




Originalfernbedienung Ersatzfernbedienung

Slow/Dpss-		Vol-
Display		Display / Media
Chan-		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
-/--		Guide / EPG / -/--
0		0
Ch.Memo		Fav / Marker / PC
Counter Clock		Red / Netflix / Search
Count Remain		Green / APP / Repeat

Originalfernbedienung Ersatzfernbedienung

Counter Stop		Yellow / YouTube / Repeat
Counter Reset		Blue / Prime Video / Random
Slow Down		Shift + Play /
Rec. On/Off		Shift + Rec / Rec Mode
X2 Rew/Play		Shift + << /
Frame Down		Shift + I<< / Preset-
Frame Up		Shift + >>I / Preset+
Index Pict+		Shift + Up
Set-		Shift + Left
Set+		Shift + Right
Index Pict-		Shift + Down
Otr/A.Otr		Shift + Smart / List
Tracking+		Shift + CH+ /
Vps/Pdc		Shift + Display / Media
Tracking-		Shift + CH- /
Search Index		Shift + Red / Netflix /

