 



 
 
 

 
 

 
 

 
 


 

 
 

 

 
 

 
 
 




Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Fav		Pre Ch
	Recall		Back
	P.Mode		Format
	S.Mode		Shift + Dual
	Sleep		Sleep

Originalfernbedienung Ersatzfernbedienung

	Tv/Radio		TV/R
	Display		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Ok		Ok
	Menu		Menu
	Exit		Exit
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Epg		Guide
	Media		Media
	Ch+		Ch +
	Ch-		Ch -
	Rec		Rec





Originalfernbedienung Ersatzfernbedienung

	T.Shift		Options
	I/II Audio		Dual
	Size/Aspect		3D
	Text		Text
	Reveal		D. Menu
	Subpage		Smart
	Hold		Eject
	Subtitle		Subt
	Index/Rec List		List
	Play		Play
	Pause		Pause
	Stop		Stop
	<<		<<
	>>		>>
	<<		<<
	>>		>>
	Red		Red

Originalfernbedienung Ersatzfernbedienung

	Green		Green
	Yellow		Yellow
	Blue		Blue

