



**Originalfernbedienung Ersatzfernbedienung**







 
 
 






	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Radio / AV		TV/R
	Lang / -/--		Dual
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	CH+		Ch +

**Originalfernbedienung Ersatzfernbedienung**

	CH-		Ch -
	Info		Info
	EPG		Guide
	Up		Up
	Left		Left
	Right		Right
	Down		Down
	Exit		Exit
	Yellow / Pause		Yellow
	Blue / >>		Blue
	@ / Stop		Smart
	@ / Stop		Stop
	Rec / [ ]		Rec




**Originalfernbedienung Ersatzfernbedienung**

PWR On/Off		Power
Mute		Mute
Epg	 + 	Shift + Guide
App		Media
Info		Info
TV		TV/R
Text		Text
Menu		Menu
Menu Up		Up
Display	 + 	Shift + Info
Menu Left		Left
OK Enter		Ok
Menu Right		Right
Exit		Exit
Menu Down		Down
Back		Back
Volume+		Vol +

**Originalfernbedienung Ersatzfernbedienung**

CH/Page+		Ch +
Volume-		Vol -
CH/Page-		Ch -
1. ?		1
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7
8tuv		8
9wxyz		9
Guide Pilote		Guide
0/10		0
FAV Pref.		Pre Ch
Red		Red
Green		Green







## Originalfernbedienung Ersatzfernbedienung

Yellow		Yellow
Blue		Blue
Freeze		Stop
Dec/Pause		Pause
East	+	Shift + Red
Lang./Rewind		Dual
H/V Play	+	Shift + Yellow
LNB F.Forward	+	Shift + Blue

## Originalfernbedienung Ersatzfernbedienung