




 
 
 




 



 
 

 


 
 
 
 

 

 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Stop		Stop
	Play/Pause		Pause
	Play/Pause		Play
	Rec		Rec
	Next		>>
	FWD		>>
	REW		<<
	Prev		<<<
	File		List
	Mute		Mute
	AV		AV
	TV / Rad		TV/R
	Audio		Dual
	SUB		Subt
	APP		Media
	Guida		Guide

Originalfernbedienung Ersatzfernbedienung

	Lista		Shift + Ok
	Info		Info
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Back		Back
	Exit		Exit
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Menu		Menu				
	TXT		Text				

