


















**Originalfernbedienung Ersatzfernbedienung**

|            |            |   |                           |
|------------|------------|---|---------------------------|
| POWER      | Power      |    | Power                     |
| DISPLAY    | Display    |    | Display / Media           |
| OPEN/CLOSE | Open/Close |    | Eject / Surround          |
| LANGUAGE   | Language   |    | Audio / Lang I/II         |
| ANGLE      | Angle      |    | Info / Angle              |
| SUBTITLE   | Subtitle   |    | Subtitle / EQ             |
| PROG       | Prog       |    | TV/Radio /                |
| MUTE       | Mute       |    | Mute / Dimmer             |
| PDVD       | PDVD       |    | AV / Input / RDS          |
| TIME       | Time       |   | Sleep / Timer             |
| ZOOM       | Zoom       |  | Zoom / Size               |
| A-B        | A-B        |  | Yellow / YouTube / Repeat |
| 1          | 1          |  | 1                         |
| 2          | 2          |  | 2                         |
| 3          | 3          |  | 3                         |
| REPEAT     | Repeat     |  | Green / APP / Repeat      |
| 4          | 4          |  | 4                         |

**Originalfernbedienung Ersatzfernbedienung**

|           |           |   |                        |
|-----------|-----------|---|------------------------|
| 5         | 5         |    | 5                      |
| 6         | 6         |    | 6                      |
| STEP      | Step      |    | Shift + Pause / Step / |
| 7         | 7         |    | 7                      |
| 8         | 8         |    | 8                      |
| 9         | 9         |    | 9                      |
| RESUME    | Resume    |    | Smart / List           |
| 10+       | 10+       |    | Guide / EPG / -/-      |
| 0/10      | 0/10      |    | 0                      |
| CLEAR     | Clear     |   | Exit / Cancel / Clear  |
| ECHO-     | Echo-     |  | CH- / Page-            |
| ECHO+     | Echo+     |  | CH+ / Page+            |
| VOLUME-   | Volume-   |  | Vol-                   |
| VOLUME+   | Volume+   |  | Vol+                   |
| MENU/VIEW | Menu/View |  | Menu / Home            |
| UP        | Up        |  | Up                     |
| TITLE     | Title     |  | Sound / Title          |



