


 

 

 







 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	i		Info / Angle
	0		0
	R		Back / Return
	(≡i)		>> / Tune+
	(◆)		l<< / Preset-
	(≡o)		<< / Tune-









 

 











 

Originalfernbedienung Ersatzfernbedienung

	(≡?)		Play / Slow
	Freeze		Pause / Step / Freeze
	Aspect		Shift + Picture / Format
	Audio		Audio / Lang I/II
	Sleep		Sleep / Timer
	Picture		Picture / Format
	Source		AV / Input / RDS
	(≡x)		Rec / Rec Mode
	Hold		Stop / Hold
	P+		CH+ / Page+
	Up		Up
	Left		Left
	Vol-		Vol-
	Menu		Menu / Home
	Right		Right
	Vol+		Vol+
	P-		CH- / Page-





**Originalfernbedienung   Ersatzfernbedienung**

	Down		Down
	(≡)(-)		Text / Goto
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	PIP Source		Shift + 3
	PIP Main		Shift + 2
	PIP Swap		Shift + 5
	PIP Position		Shift + 4
	PIP Size		Shift + 6
	PIP		Shift + 1

**Originalfernbedienung   Ersatzfernbedienung**