 

 





 
 
 
 

 











 

 

 

 







Originalfernbedienung Ersatzfernbedienung

	Standby - On		Power
	Display		Info
	Input Select		AV
	Sleep		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Setup		Options
	Sound Select		Dual
	Back		Back

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Vol +		Vol +
	Vol -		Vol -
	Mute		Mute
	Prog +		Ch +
	Prog -		Ch -
	Prog Return		Pre Ch
	Red		Red
	Green		Green
	Yellow		Yellow
	Cyan		Blue
	Color System		Smart
	Reveal		TV/R





Originalfernbedienung Ersatzfernbedienung

	Expand		Eject
	Sub Code		Subt
	[≡]		Text
	[≡i]		Media
	[≡□]		Stop

Originalfernbedienung Ersatzfernbedienung

