



 





Originalfernbedienung Ersatzfernbedienung

	Standby/On		Power
	Input Select		AV / Input / RDS
	Display		Display / Media
	Sleep		Sleep / Timer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Menu		Menu / Home
	0		0
	Sound Sel		Audio / Lang I/II
	Mute		Mute / Dimmer

Originalfernbedienung Ersatzfernbedienung

	Prog Return		Fav / Marker / PC
	Vol+		Vol+
	Right		Right
	Prog/Page Up		CH+ / Page+
	Up		Up
	OK		OK
	Vol-		Vol-
	Left		Left
	Prog/Page		CH- / Page-
	Down		Down
	Color System		D.Menu / Top
	Hold		Stop / Hold
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Index		Setup / OPT /



