

 

 
 

 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	16:9 Wide		Format
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	F1		Shift + 1
	Guide		Smart
	Smart S		Dual
	Smart P		Options

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Vol +		Vol +
	Vol -		Vol -
	Menu		Menu
	Source		AV
	CH +		Ch +
	CH -		Ch -
	Info		Info
	Sleep		Sleep
	Recall		Back
	L / R		Shift + Dual
	Play / Index		Play
	Pause / Zoom		Pause





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Pause / Zoom	 Eject		
 Stop / Reveal	 Stop		
 TTX	 Text		
 I<< / Hold	 I<<		
 >>I / List	 >>I		
 << / Language	 <<		
 >> / Radio	 >>		
 >> / Radio	 TV/R		
 Red / Rec	 Red		
 Red / Rec	 Rec		
 >>I / List	 List		
 Green / Subtitle	 Green		
 Green / Subtitle	 Subt		
 Yellow / FAV	 Yellow		
 Yellow / FAV	 Pre Ch		
 Blue / EPG	 Blue		
 Blue / EPG	 Guide		

