




Originalfernbedienung	Ersatzfernbedienung
	 Power
	 1
	 2
	 3
	 Mute / Dimmer
	 4
	 5
	 6
	 Back / Return
	 7
	 8
	 9
	 0
	 Menu / Home
	 Up
	 CH+ / Page+
	 Exit / Cancel / Clear

Originalfernbedienung	Ersatzfernbedienung
	 Left
	 Vol-
	 OK
	 Right
	 Vol+
	 Shift + CH+ /
	 Down
	 CH- / Page-
	 Shift + CH- /
	 TV/Radio /
	 Info / Angle
	 Fav / Marker / PC
	 Audio / Lang I/II
	 Subtitle / EQ
	 Text / Goto
	 Guide / EPG / -/--
	 Play / Slow





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Pause		Pause / Step / Freeze				
	Stop		Stop / Hold				
	Rec		Rec / Rec Mode				
	Red/←		Red / Netflix / Search				
	Green/→		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue/PVR		Blue / Prime Video / Random				

