 









 



 

 

 

 

 

 

 













Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------------|---|------------------|
|  | Tv |  | TV/Radio / |
|  | Power |  | Power |
|  | World |  | Smart / List |
|  | [≡]/Text |  | Text / Goto |
|  | Sleep |  | Sleep / Timer |
|  | Music/Movie/Phot |  | Sound / Title |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | Source/Games |  | AV / Input / RDS |
|  | 0 |  | 0 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|-----------------------------|
|  | Recall |  | Shift + Back / Return |
|  | Red |  | Red / Netflix / Search |
|  | Green |  | Green / APP / Repeat |
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Blue |  | Blue / Prime Video / Random |
|  | Vol+ |  | Vol+ |
|  | Mute |  | Mute / Dimmer |
|  | PR+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | i |  | Info / Angle |
|  | PR- |  | CH- / Page- |
|  | Menu |  | Menu / Home |
|  | Up |  | Up |
|  | Q.Menu |  | D.Menu / Top |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |





| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|-----------------------|---------------------|-----------------------|-----------------------|
| | Back | | Back / Return |
| | Down | | Down |
| | Exit | | Exit / Cancel / Clear |
| | [≡].. | | Setup / OPT / |
| | Lang | | Audio / Lang I/II |
| | O/* | | Zoom / Size |
| | Q./* | | Picture / Format |
| | Play | | Play / Slow |
| | Stop | | Stop / Hold |
| | << | | << / Tune- |
| | >> | | >> / Tune+ |
| | Pause | | Pause / Step / Freeze |
| | Rec | | Rec / Rec Mode |
| | Guide | | Guide / EPG / -/-- |
| | [-O-] | | Display / Media |
| | | | |
| | | | |
| | | | |
| | | | |

