 





 







 


 




 

 


 


 
 


 
 



 
 
 
 
 


 





 

 
 
 
 








 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	A-Z		AV
	Tv/Radio		TV/R
	Mute		Mute
	UHF		Smart
	Pause		Pause
	EPG		Guide

Originalfernbedienung Ersatzfernbedienung

	♥/FAV		Pre Ch
	Menu		Menu
	Back		Back
	EXit		Exit
	Info		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Red/FTA/CAS		Red
	Green/SAT		Green
	Yellow/Tv/SAT		Yellow





Originalfernbedienung Ersatzfernbedienung

	Blue/A/V		Blue
	↑/+100		>>I
	↓/-100		I<<
	+		>>
	-		<<
	F1/Zoom		Eject
	F2/Sleep		Sleep
	F3/PIP		3D
	F4/Recall		Dual
	[≡]/Text		Text
	[...]		Subt

Originalfernbedienung Ersatzfernbedienung

