 


 
 

 
 
 
 
 



 
 





**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	Rec		Rec
	Goto		Smart
	Aspect		3D
	V.Format		Format
	<<		<<
	>>		>>
	Play		Play
	Pause		Pause
	Stop		Stop
	Tv/Radio		TV/R
	Audio		Dual
	Dev		Options
	Recall		Back
	Red/TTX		Red
	Green/SUB.T		Green

**Originalfernbedienung    Ersatzfernbedienung**

	Yellow/Zoom		Yellow
	Blue/Option		Blue
	Info		Info
	FAV		Pre Ch
	Menu		Menu
	Exit		Exit
	Up/CH+		Up
	Down/CH-		Down
	Right/Vol+		Right
	Left/Vol-		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	SAT		Media
	EPG		Guide
	Page+		Ch +
	Page-		Ch -




**Originalfernbedienung Ersatzfernbedienung**

<b>1</b>	1	<b>1</b>	1
<b>2</b>	2	<b>2</b>	2
<b>3</b>	3	<b>3</b>	3
<b>4</b>	4	<b>4</b>	4
<b>5</b>	5	<b>5</b>	5
<b>6</b>	6	<b>6</b>	6
<b>7</b>	7	<b>7</b>	7
<b>8</b>	8	<b>8</b>	8
<b>9</b>	9	<b>9</b>	9
<b>0</b>	0	<b>0</b>	0
<b>FIND</b>	Find	<b>TIMER AV</b>	AV
<b>MP</b>	MP	<b>DISC NAV LIST</b>	List

**Originalfernbedienung Ersatzfernbedienung**