




 


 
 



 

 

 
 
 
 
 

 

 

 



 
 




**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	Play / Pause		Play
	USB / Stop		Stop
	USB / Stop		Media
	Sleep		Rec
	Info		Info
	Red / I<<<		Red
	Red / I<<<		I<<<
	Green / >>>I		>>>I
	Green / >>>I		Green
	Yellow / <<<		Yellow
	Yellow / <<<		<<<
	Blue / >>>		Blue
	Blue / >>>		>>>
	FAV		Pre Ch
	SAT		AV

**Originalfernbedienung    Ersatzfernbedienung**

	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Menu		Menu
	Exit		Exit
	Subtitle		Subt
	TXT		Text
	Recall		Back
	Audio		Dual
	Page +		Ch +
	Page -		Ch -
	1		1
	2		2
	3		3
	4		4





Originalfernbedienung   Ersatzfernbedienung

5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
EPG	EPG	GUIDE	Guide
TV/RADIO	TV / Radio	SEARCH TV/R	TV/R

Originalfernbedienung   Ersatzfernbedienung