

 

 




 

 

 
 

 

 







 
 
 
 
 
 
 
 



 

 



 



 











 
 


 

 
 





Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	FAV		Pre Ch
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV/Radio		TV/R
	Back		Back
	Menu		Menu
	EPG		Guide

Originalfernbedienung Ersatzfernbedienung

	TXT		Text
	Exit		Exit
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Red		Red
	Info		Info
	Green		Green
	Yellow		Yellow
	Audio		Dual
	Blue		Blue



