

 



































Originalfernbedienung Ersatzfernbedienung

	TV / RAD		TV/Radio /
	Power		Power
	Mute		Mute / Dimmer
	F1		Shift + Red / Netflix /
	F2		Shift + Green / APP /
	F3		Shift + Yellow / YouTube /
	F4		Shift + Blue / Prime
	F.List		Smart / List
	G.List		Display / Media
	FAV		Fav / Marker / PC
	Aspect		Picture / Format
	I<<		I<< / Preset-
	<<		<< / Tune-
	>>		>> / Tune+
	>>I		>>I / Preset+
	Timer		Sleep / Timer
	Stop		Stop / Hold

















 








 

 

 

Originalfernbedienung Ersatzfernbedienung

	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	Vol+		Vol+
	Guide		Guide / EPG / -/-
	CH+		CH+ / Page+
	Vol-		Vol-
	Exit		Exit / Cancel / Clear
	CH-		CH- / Page-
	Info		Info / Angle
	Up		Up
	Menu		Menu / Home
	Left		Left
	OK		OK
	Right		Right
	Audio		Audio / Lang I/II
	Down		Down











Originalfernbedienung Ersatzfernbedienung

	Video		Shift + 4
	History		D.Menu / Top
	OPT		Setup / OPT /
	TXT		Text / Goto
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	◀		Shift + Left
	0		0
	▶		Shift + Right

