 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Sleep		Sleep
	V-Format		Format
	F1		Shift + 1
	TV / SAT		Shift + TV/R
	USB		Media
	Find		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

 


 
 

 

 

 

 
 
	0 / Zoom		0
	0 / Zoom		Eject
	TV / Radio		TV/R
	Recall		Back
	Menu		Menu
	Info		Info
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Exit		Exit
	EPG		Guide
	Vol +		Vol +
	Vol -		Vol -
	Rec		Rec
	Page Up		Ch +




Originalfernbedienung Ersatzfernbedienung

 Page Down	 Ch -
 Folder	 Shift + Media
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 << / Page -	 <<
 >> / Page +	 >>
 I<< Prev	 I<<
 Next >>I	 >>I
 Tms	 List
 <I Step	 Shift + Left
 Step I>	 Shift + Right
 Play Mode	 Shift + Play
 White	 3D
 Red / Audio	 Red
 Red / Audio	 Dual
 Green / Option	 Options

Originalfernbedienung Ersatzfernbedienung

 Green / Option	 Green
 Yellow	 Yellow
 Cyan	 Blue
 Fav	 Pre Ch
 SAT	 AV
 TTX	 Text
 Subtitle	 Subt

