


 
 

 




 



 

 

 
 
 

 


 


 
 







Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|-------|
|  | Power |  | Power |
|  | Tv/Radio |  | TV/R |
|  | Subtitle |  | Subt |
|  | Q Menu |  | Menu |
|  | Guide |  | Guide |
|  | []/Ratio |  | Dual |
|  | Input |  | AV |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------|---|---------------|
|  | List |  | List |
|  | Q.View |  | Format |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Mute |  | Mute |
|  | APP/* |  | Shift + Media |
|  | Fav |  | Pre Ch |
|  | PR+ |  | Ch + |
|  | PR- |  | Ch - |
|  | Text |  | Text |
|  | Info |  | Info |
|  | T.Opt |  | Options |
|  | Smart |  | Smart |
|  | My Apps |  | Media |
|  | Back |  | Back |
|  | Exit |  | Exit |
|  | Up |  | Up |



