



Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|-------------|---|--------------------------|
| | Power | | Power |
| | Power Tv | + | Shift + Power |
| | DVD | + | Shift + 2 |
| | HDD | + | Shift + 7 |
| | Open/Close | | Eject / Surround |
| | AV Input Tv | + | Shift + AV / Input / RDS |
| | 1 | | 1 |
| | 2 | | 2 |
| | 3 | | 3 |
| | PR+ Tv | + | Shift + CH+ / |
| | 4 | | 4 |
| | 5 | | 5 |
| | 6 | | 6 |
| | PR- Tv | + | Shift + CH- / |
| | 7 | | 7 |
| | 8 | | 8 |
| | 9 | | 9 |

 


 

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|-----------|--|-----------------------|
| | Vol+ Tv | | Vol+ |
| | Rec | | Rec / Rec Mode |
| | 0 | | 0 |
| | AV Input | | AV / Input / RDS |
| | Vol- Tv | | Vol- |
| | << | | << / Tune- |
| | >> | | >> / Tune+ |
| | I<< | | I<< / Preset- |
| | >>I | | >>I / Preset+ |
| | Pause | | Pause / Step / Freeze |
| | Play | | Play / Slow |
| | Stop | | Stop / Hold |
| | Home | | Menu / Home |
| | Up | | Up |
| | Menu List | | D.Menu / Top |
| | Left | | Left |
| | Enter | | OK |

 

 

 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|-----------------------------|
|  | Right |  | Right |
|  | Return |  | Back / Return |
|  | Down |  | Down |
|  | Display |  | Display / Media |
|  | EPG |  | Guide / EPG / -/-- |
|  | PR- |  | CH- / Page- |
|  | PR+ |  | CH+ / Page+ |
|  | PR List |  | Smart / List |
|  | Red/FAV |  | Red / Netflix / Search |
|  | Green/Repeat |  | Green / APP / Repeat |
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Subtitle |  | Subtitle / EQ |
|  | Blue |  | Blue / Prime Video / Random |
|  | Text |  | Text / Goto |
|  | Audio |  | Audio / Lang I/II |
|  | Title |  | Sound / Title |
|  | Marker |  | Fav / Marker / PC |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|-----------------------|
|  | Clear |  | Exit / Cancel / Clear |
|  | Timeshift |  | Sleep / Timer |
|  | Tv/DVD |  | Shift + 1 |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

