



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject / Open/Close		Eject
	CD/DVD	 + 	Shift + 1
	VCR	 + 	Shift + 2
	FM/AM	 + 	Shift + 3
	AV		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Program		Sleep

Originalfernbedienung Ersatzfernbedienung

	Clear		Exit
	Sound Mode	 + 	Shift + Dual
	Audio		Dual
	Show View		Media
	RDS		List
	Display / CLK/CNT		Info
	Setup / i		Options
	Setup / i		Menu
	Up / PR/TRK + / Preset +		Up
	Up / PR/TRK + / Preset +		Ch +
	Down / PR/TRK - / Preset -		Down
	Down / PR/TRK - / Preset -		Ch -
	Down / PR/TRK - / Preset -		Ch -
	Right / Tuning +		Right
	Left / Tuning -		Left
	OK / Memory /		Ok
	Return		Back
	Disc Menu		D. Menu



