



Originalfernbedienung Ersatzfernbedienung

	POWER		Power
	TELETEXT		Text
	Index		Play
	Clock / Subpage		Pause
	Hold		Stop
	Reveal		Rec
	Cancel		<<
	Size		>>
	RED		Red
	GREEN		Green
	YELLOW		Yellow
	BLUE		Blue
	1		1
	2		2
	3		3
	4		4
	5		5

Originalfernbedienung Ersatzfernbedienung

	6		6
	7		7
	8		8
	9		9
	0		0
	MUTE		Mute
	RTN.		Back
	CH+		Ch +
	CH-		Ch -
	VOL+		Vol +
	VOL-		Vol -
	ARC		Smart
	APC		Media
	UP		Up
	LEFT		Left
	OK		Ok
	RIGHT		Right

 





Originalfernbedienung Ersatzfernbedienung

	DOWN		Down
	MENU		Menu
	EXIT		Exit
	TV		Shift + Red
	PC / HD		Shift + Green
	VIDEO		Shift + Yellow
	SCART		Shift + Blue
	SOUND		Dual
	SUB-TITLE		Subt
	GUIDE		Guide
	SLEEP		Sleep
	PIP ON/OFF		Shift + Ok
	PIP SWAP		Shift + Left
	PIP SWAP		Shift + Right
	PIP SOURCE UP		Shift + Up
	PIP SOURCE		Shift + Down
	PIP SIZE		Shift + Media

Originalfernbedienung Ersatzfernbedienung

	PIP POSITION		Shift + Smart

